


Instruction of Watch Movement

3 hands / Date

◆ Display

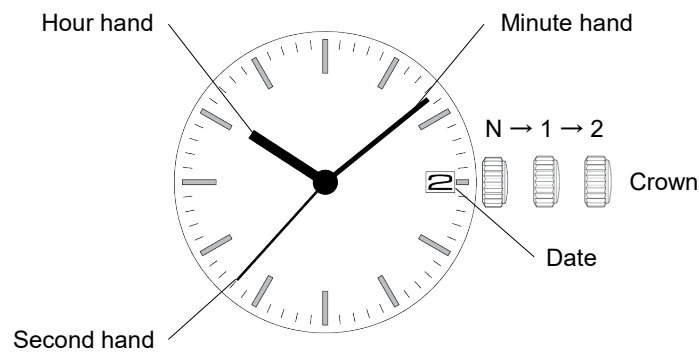

◆ Crown operation

	Crown position		
	N : normal	1 : 1st click	2 : 2nd click
Crown	Free	Turn for date change	Time setting

◆ How to set time

- (1) Pull the crown out to the 2nd click position when the second hand is at the 12 o'clock position.
- (2) Turn the crown to set the hour and minute hands.
Take a.m./p.m. into consideration when setting the hour and minute hands to the desired time.
- When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
- (3) Push the crown back to the normal position.

◆ How to set date

- (1) Pull the crown out to the 1st click position.
- (2) Turn the crown to set the date.
- Do not set the date between 9:00 p.m. and 1:00 a.m..
- (3) Push the crown back to the normal position.

Tips : When the date change during daytime, it happens when a.m./p.m. is wrongly set. Advance the hour hand by 12 hours.

◆ Power depletion warning function

When the battery nears its end, the second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible.

- The watch remains accurate while the second hand is moving at two-second intervals.

Note : The availability of this function is different depending on the caliber.