


Watch Movement Parts List and Disassemble Guide

Cal.YM26A

WORLD TIME & ALARM

- World time
- Alarm

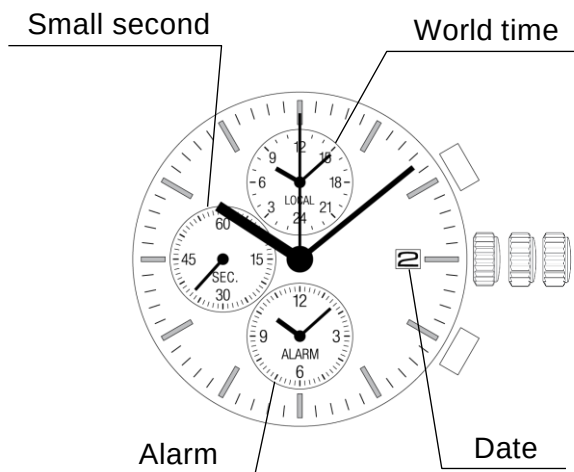

MOVEMENT SPECIFICATIONS

Movement Size 12'''

Height 3.7mm


Casing Diameter Ø 27.0mm

Battery Life 3 years


Cal.YM26A Parts List 零件一覽表

No.	PARTS NAME	CHINESE (簡體語)	QTY	YM26A1
(1)	Pin for date indicator maintaining plate	日曆導向盤柱仔	2	0027 973
(2)	Date indicator maintaining plate	日曆盤固定片	1	0808 580
(3)	Date indicator	日曆導向盤	1	0878 ***
(4)	Date corrector wheel	日曆修正輪	1	0737 580
(5)	Calendar corrector setting transmission wheel	日曆過輪	1	0962 580
(6)	Date drive wheel	日曆驅動盤	1	0802 580
(7)	World time 24hour wheel	世界時間24時輪	1	0278 581
(8)	Alarm hour wheel	響鬧時輪	1	0271 583
(9)	Hour wheel	時輪	1	0271 588
(10)	Battery	電池	1	3013 250
(11)	Screw(A)	螺絲	3	0022 230
(12)	Battery clamp	電池夾	1	4225 663
(13)	Screw(B)	螺絲	3	0022 459
(14)	Circuit cover	電路板蓋	1	4457 980
(15)	Seconds wheel friction spring	計秒阻力簧	1	0396 580
(16)	Conduction basal plate	導通基板	1	4224 514
(17)	Circuit block	電路板	1	4000 619
(18)	Buzzer lead terminal	響鬧片引極	1	4246 527
(19)	Battery connection(-)	負極片	1	4270 710
(20)	Fixing pin for train wheel bridge	夾板拖柱仔	1	0027 974
(21)	Train wheel bridge	夾板	1	0125 509
(22)	City indicator wheel	城市輪	1	0888 582
(23)	1st city indicator intermediate wheel	第一城市過輪	1	0885 594
(24)	2nd city indicator intermediate wheel	第二城市過輪	1	0885 595
(25)	Alarm intermediate wheel	響鬧分輪	1	0950 590
(26)	Alarm center wheel	響鬧中心輪	1	0270 582
(27)	Fourth wheel & pinion	4號輪	1	0241 583
(28)	Small second wheel & pinion	細秒針輪	1	0240 580
(29)	Alarm minutes wheel	響鬧分輪	1	0261 582
(30)	Fifth wheel & pinion	5號輪	1	0701 581
(31)	Third wheel & pinion	3號輪	1	0231 580
(32)	Switch lever (A)	控制竿 (A)	1	4450 703
(33)	Setting lever	押制竿	1	0383 592
(34)	Minutes wheel	度數輪/分輪	1	0261 580
(35)	World time intermediate wheel	世界時間過輪	1	0950 590
(36)	World time center wheel	世界時間中心輪	1	0270 582
(37)	World time minute wheel	世界時間24分輪	1	0264 580
(38)	Yoke	橫擔	1	0384 583
(39)	Train wheel setting lever	輪組止動竿	1	0391 591
(40)	Switch lever (B)	控制竿 (B)	1	4450 701
(41)	Setting wheel	小鐵車/撥針輪	1	0281 580
(42)	Clutch wheel	豬籠輪	1	0282 585
(43)	Setting stem(standard)	柄軸/巴芯	1	0351 584
(44)	Coil block	線圈	1	4002 700
(45)	Coil block for alarm	響鬧線圈	1	4002 711
(46)	Coil block for city	城市線圈	1	4002 700
(47)	Coil block for world time	世界時間線圈	1	4002 711
(48)	Step rotor	轉子	1	4146 710
(49)	Step rotor for alarm	響鬧轉子	1	4146 710
(50)	Step rotor for city	城市轉子	1	4146 710
(51)	Step rotor for world time	世界時間轉子	1	4146 710
(52)	Rotor stator	轉子甲板/定子	1	4239 710
(53)	Rotor stator for alarm	響鬧定子	1	4239 712
(54)	Rotor stator for city	城市定子	1	4239 711
(55)	Rotor stator for world time	世界時間定子	1	4239 713
(56)	Center wheel spring	中心輪彈弓	1	4283 581
(57)	Center wheel & pinion	中心輪	1	0221 583


YM26A DISASSEMBLE CHART (1)

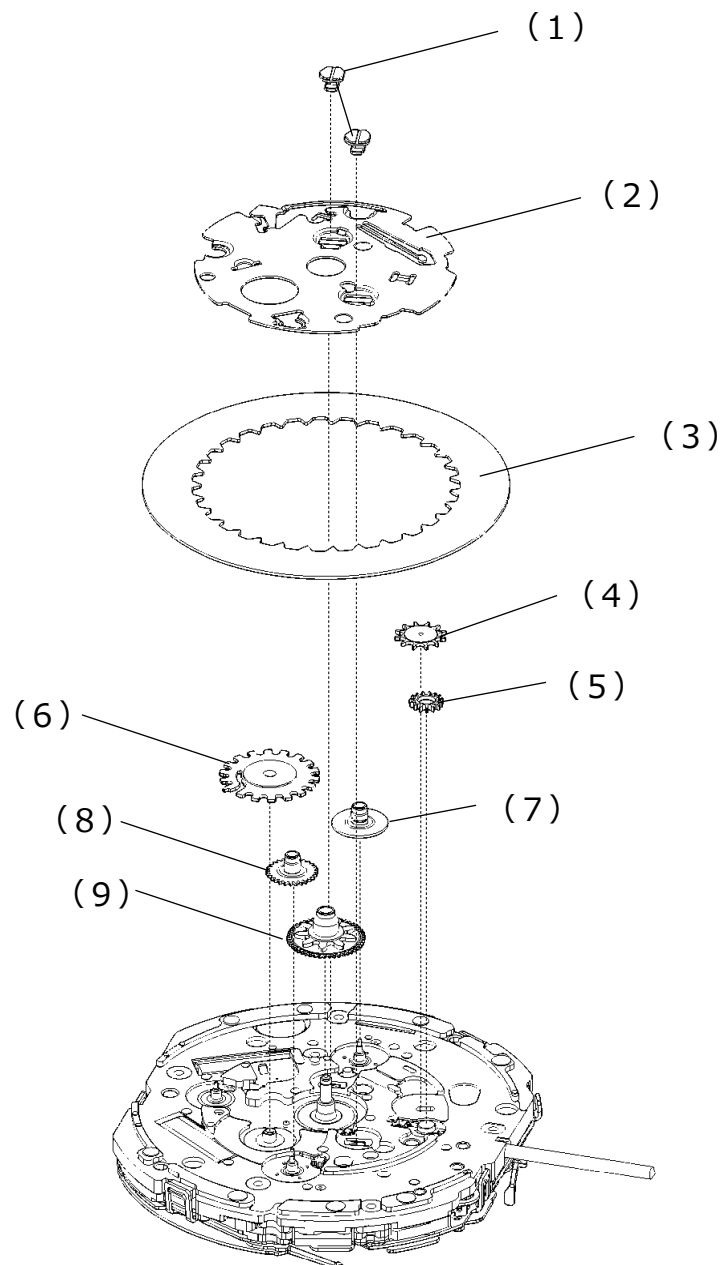

YM26A DISASSEMBLE CHART (2)

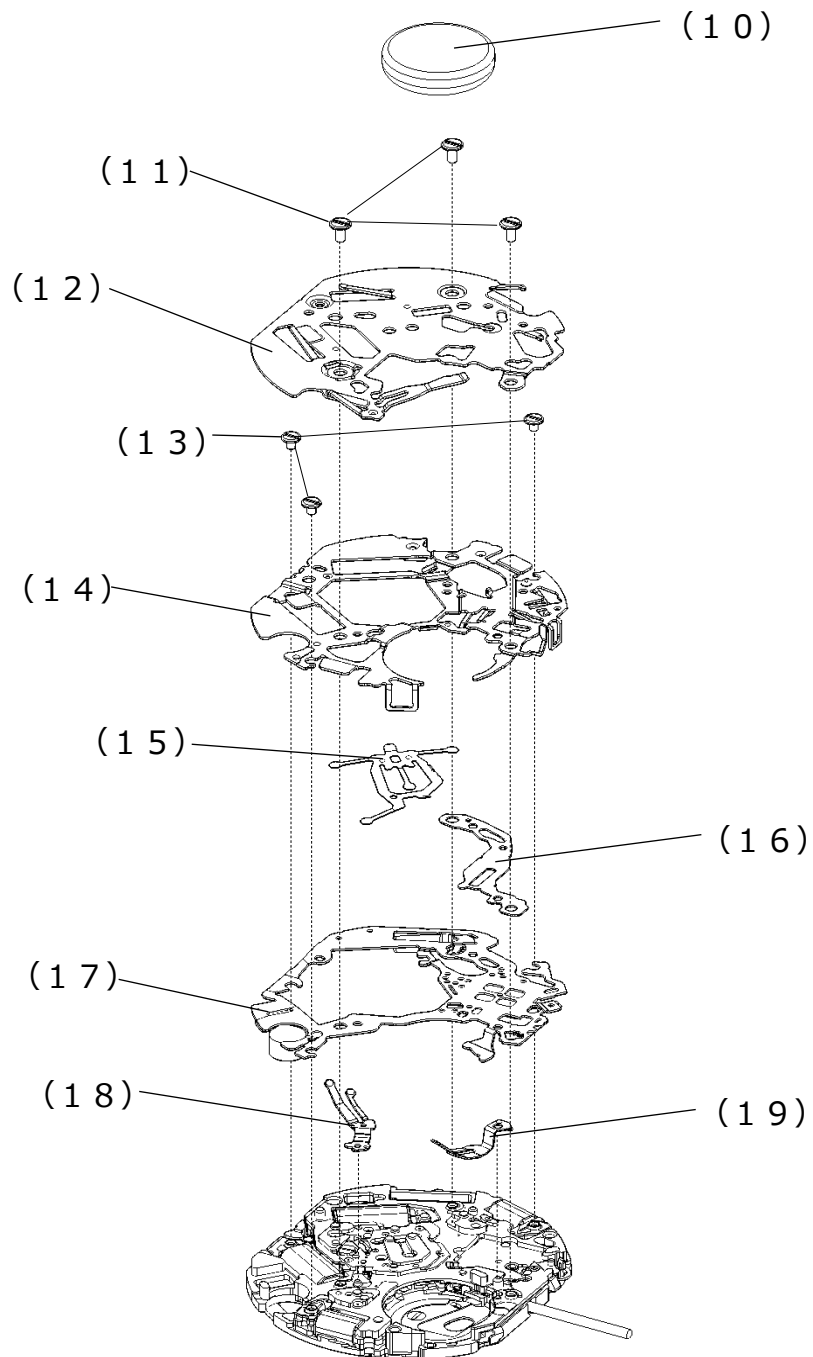

YM26A DISASSEMBLE CHART (3)

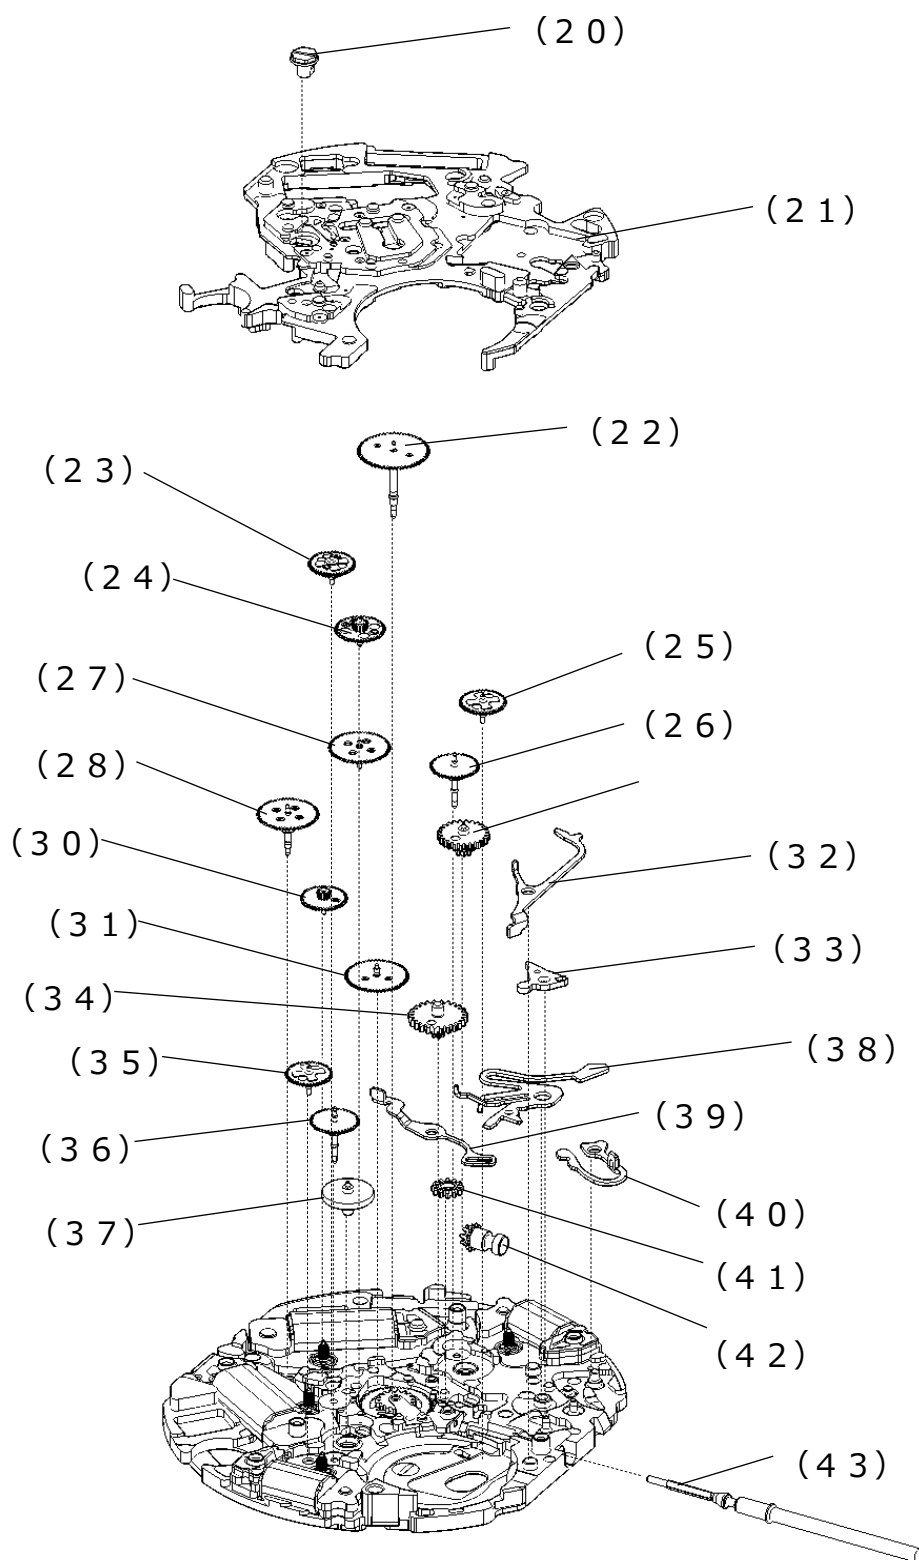

YM26A DISASSEMBLE CHART (4)

