

Watch Movement Parts List and Disassemble Guide

Cal.Y120F

STANDARD
- 2 hands



MOVEMENT SPECIFICATIONS

Movement Size 6 3/4 × 8 '''

Height 2.99mm


Casing Diameter 15.3 × 17.8mm

Battery Life 3 years

Cal.Y1201F Parts List 零件一覽表

No.	PARTS NAME	CHINESE(簡体字)	QTY	Y120F1	Y120F3	Y120F2
(1)	Battery	電池	1	3016 180	←	←
(2)	Screw	螺絲	2	0022 484	←	←
(3)	Screw	螺絲	1	0022 647	←	←
(4)	Circuit bridge plate	電路板蓋	1	4050 532	4050 600	4050 601
(5)	Circuit block	電路板	1	4000 982	←	←
(6)	Battery connection (+)	正極片	1	4268 921	←	←
(7)	Coil block	線圈	1	4002 559	←	←
(8)	Train wheel bridge	夾板	1	0125 788	←	←
(9)	Fourth wheel & pinion	4號輪	1	0241 778	0241 803	0241 804
(10)	Third wheel & pinon	3号輪	1	0231 786	←	←
(11)	Fifth wheel & pinon	5號輪	1	0701 787	←	←
(12)	Step rotor	轉子	1	4146 787	←	←
(13)	Train wheel setting lever	輪組止動竿	1	0391 787	←	←
(14)	Minute wheel	度數輪/分輪	1	0261 787	←	←
(15)	Setting wheel	小鐵車/撥針輪	1	0281 786	←	←
(16)	Setting lever	押制竿	1	0383 785	←	←
(17)	Yoke	橫擔	1	0384 785	←	←
(18)	Setting stem (standard)	把芯 (标准)	1	0354 788	←	←
	Setting stem (long)	把芯 (长)	1	0354 787	←	←
(19)	Clutch wheel	豬籠輪	1	0282 787	←	←
(20)	Battery connection (-)	負極片	1	4270 786	←	←
(21)	Insulator for battery	電池絕緣片	1	4216 786	←	←
(22)	Rotor stator	轉子甲板/定子	1	4239 786	←	←
(23)	Center wheel & pinion	中心輪	1	0221 797	0221 764	0221 779
(24)	Hour wheel guard	時輪掩	1	0376 786	←	←
(25)	Hour wheel	時輪	1	0271 796	0271 764	0271 797

Y12系 DISASSEMBLE CHART (1)

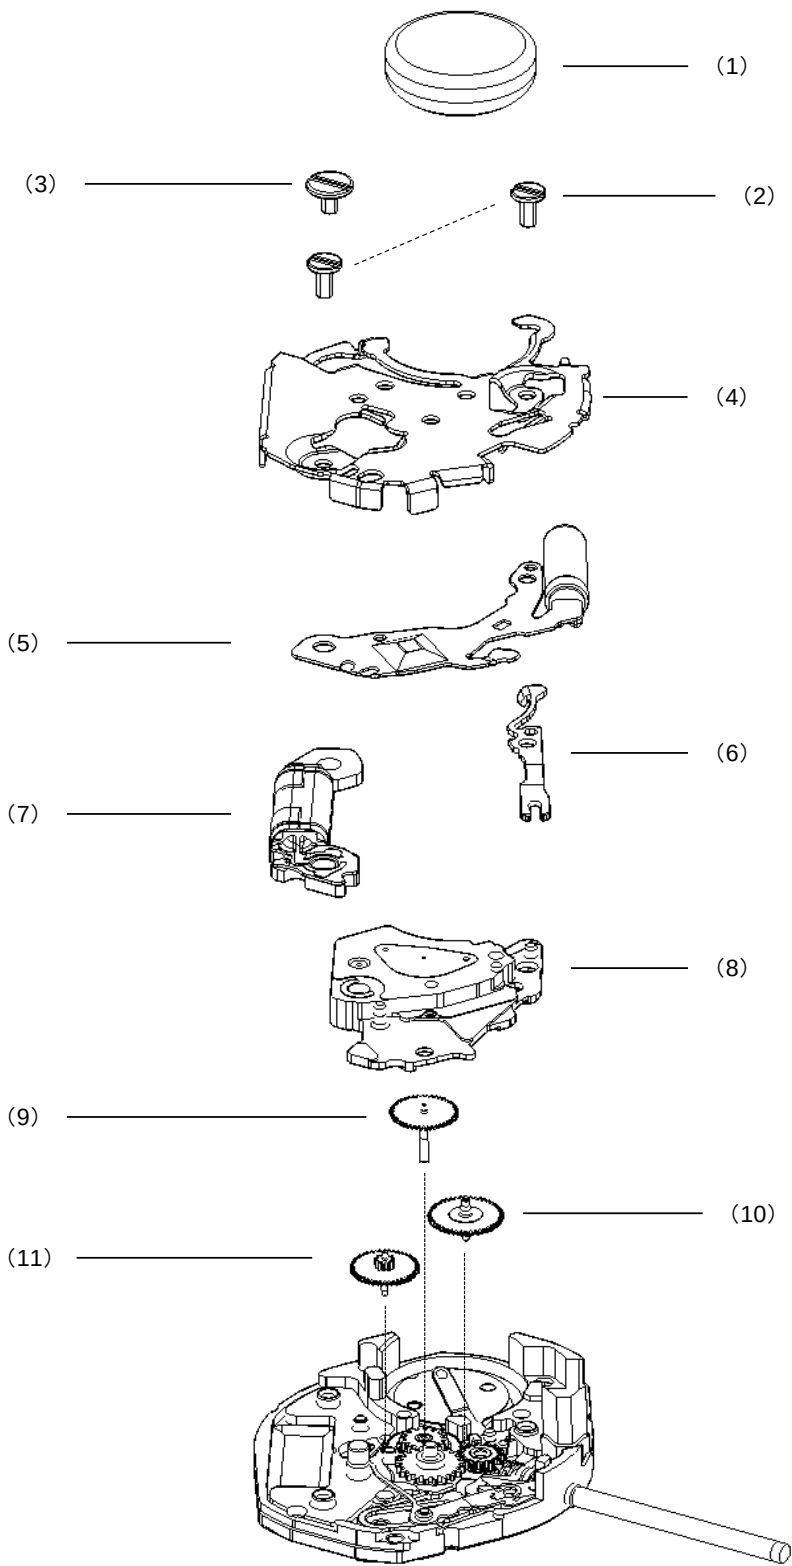

Y12系 DISASSEMBLE CHART (2)

