

Watch Movement Specification and Drawing

CHRONOGRAPH

Cal. YM14A

Movement Size

12'''

Casing Diameter


Ø 27.0mm

Height

4.34mm

Battery Life

5 years

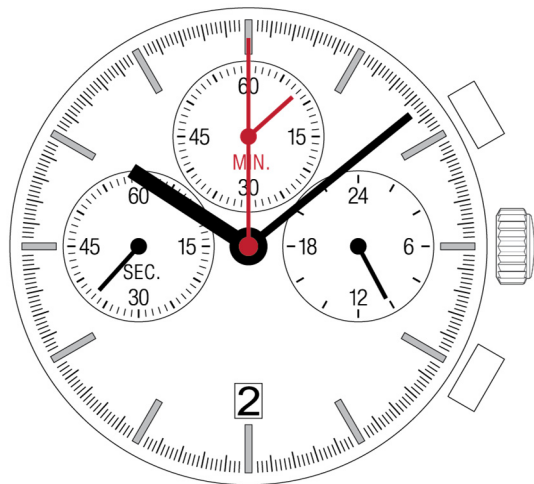


Date: 11/Jan./'19

Cal. YM14A


Items	Rev.	Page
Specifications	02	1
Appearance	01	2
Casing	03	3
Hand fitting	02	4
Hand setting stem	02	5
Dial	01	6
Holding ring for dial	01	7
Attention for assembly	03	8
Attention of casing part structure	02	9
Operation-01	01	10-01
Operation-02	01	10-02

Cal.	YM14A	Specifications	Date : 30/Jan./'15
			Rev. : 02
Analog Quartz 12''' Center second Chronograph Movement			
1. MOVEMENT DIMENSIONS			
Outside diameter	ϕ 27.60mm (12H-6H) × 24.00mm (3H-9H)		
Casing diameter	ϕ 27.00mm (12H-6H)		
Total height	4.34mm (including battery)		
2. TIME STANDARD			
Type of quartz oscillator	Tuning fork		
Frequency of quartz oscillator	32,768 Hz		
Accuracy	±20 seconds per month (on wrist)		
Operating temperature range	−5°C to +50°C		
Regulation device	Nil (Pre-adjusted)		
3. INDICATOR / FUNCTIONS			
3 Hands	Hour / Minute / 1/5 second chronograph (Center)		
Small hands	Small second (9H) / Minute chronograph (12H) / 24 Hour (3H)		
Calendar	Instant setting device for date calendar		
Reset switch			
Power depletion warning function (BLD)	(Small second hand moves at 2-second intervals)		
Chronograph	The chronograph can measure up to 60 minutes in 1/5 second increments, capable of timing 12 hours.		
4. FEATURES			
Jewels	0 Jewels		
Anti-magnetism	Over 1600A/m (Direct current magnetic field)		
Maximum unbalance of hands	Small second hand	: 0.03 μ N·m	
	24 Hour hand	: 0.03 μ N·m	
	Minute chronograph hand	: 0.03 μ N·m	
	1/5 second chronograph hand	: 0.09 μ N·m	
	Minute hand	: 0.7 μ N·m	
Moment of Inertia	1/5 second chronograph hand	: less than 0.2 μ g·m ²	
5. BATTERY			
Type / Size	Silver oxide battery / ϕ 9.5mm × t 2.73mm		
Recommended battery	SR927SW		
Nominal voltage	1.55 V		
Battery life	Approx. 5 years (2 hours chronograph operation per day)		
Driving current consumption	Approx. 0.80 μ A		
Operation stopping voltage	0.9 V		
6. SEPARATED PARTS (Parts code)			
Hand setting stem	0351584 (Standard) or 0351585 (Long)		
Holding ring for dial	0866854 (Standard)		
Battery	SR927SW		
7. TEST OF ACCURACY			
Equipment to be used	SEIKO quartz tester QT-99, QT2100 Greiner quartz timer-C , Witschi Q-tester 4000		
Duration of measurement	10 seconds		
Microphone to be used	Electromagnetic detection type		
All specifications are subject to change without notice.			

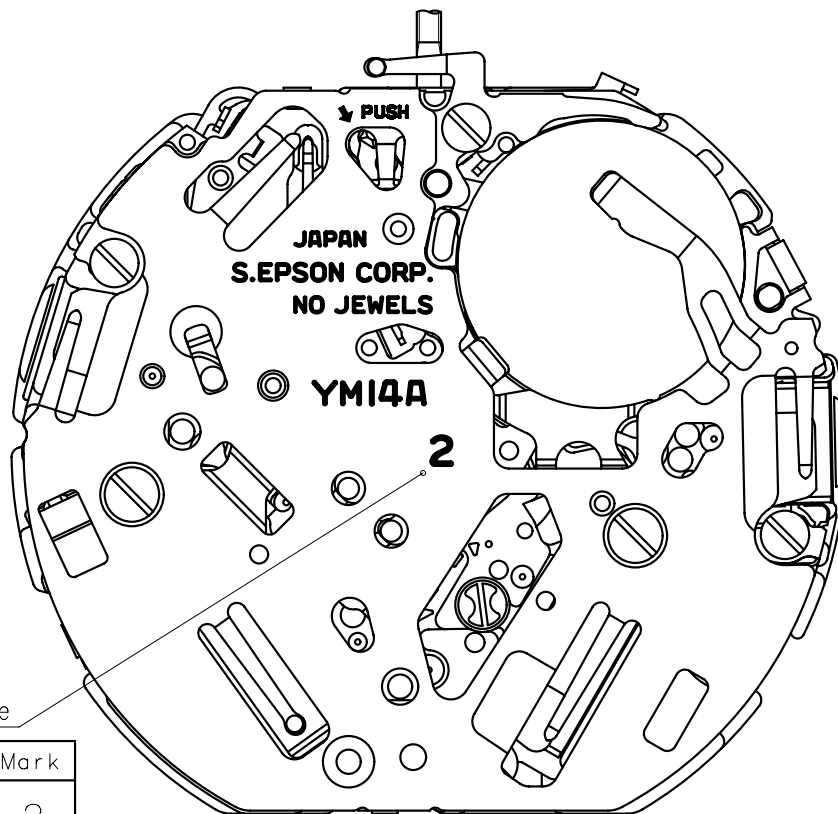


Hands type

	Mark
Type(M) YM14A**	2

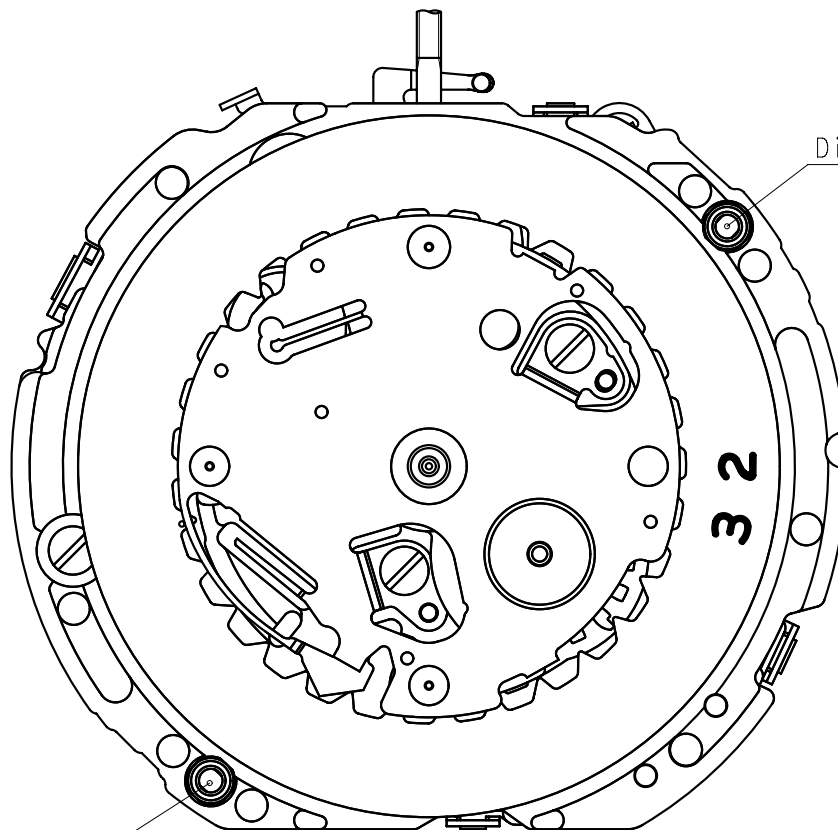


Dial leg hole B

Dial leg hole A

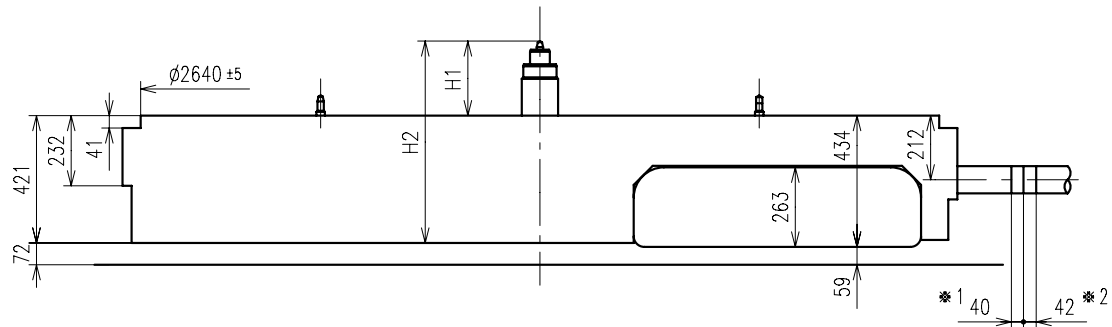


Center post		Type M (2) YM14A**
Maximum height from dial support	H1	246.5
Total height including movement	H2	667.5


*1:First pullout stroke
*2:Second pullout stroke

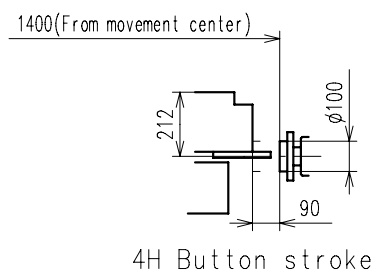


4H Button stroke

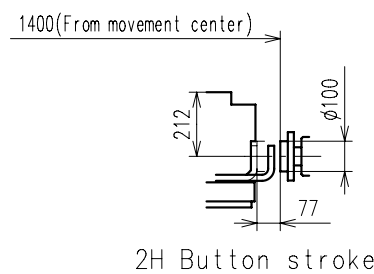

2H Button stroke

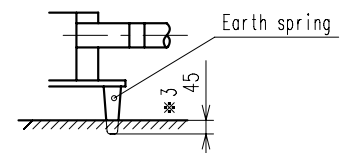

*3:The earth spring is absolutely placed in contact with the case back.

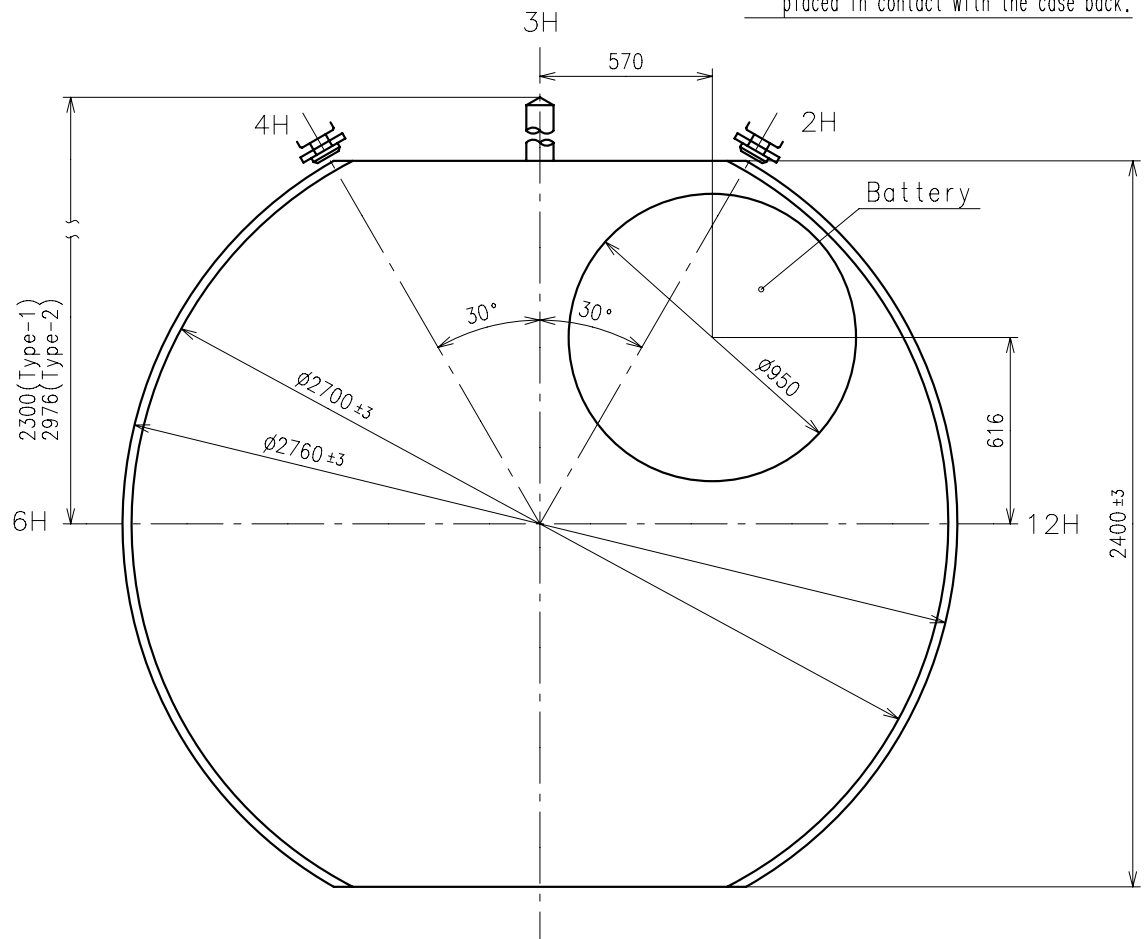


※ Unbalance


- Small second hand $\leq 0.03\mu\text{ N}\cdot\text{m}$ ($3\mu\text{ g}\cdot\text{m}$)
- 24 Hour hand $\leq 0.03\mu\text{ N}\cdot\text{m}$ ($3\mu\text{ g}\cdot\text{m}$)
- Minute chronograph hand $\leq 0.03\mu\text{ N}\cdot\text{m}$ ($3\mu\text{ g}\cdot\text{m}$)
- 1/5 second chronograph hand $\leq 0.09\mu\text{ N}\cdot\text{m}$ ($9\mu\text{ g}\cdot\text{m}$)
- Minute hand $\leq 0.70\mu\text{ N}\cdot\text{m}$ ($70\mu\text{ g}\cdot\text{m}$)

※ Moment of inertia

- 1/5 second chronograph hand $\leq 0.2\mu\text{ g}\cdot\text{m}^2$

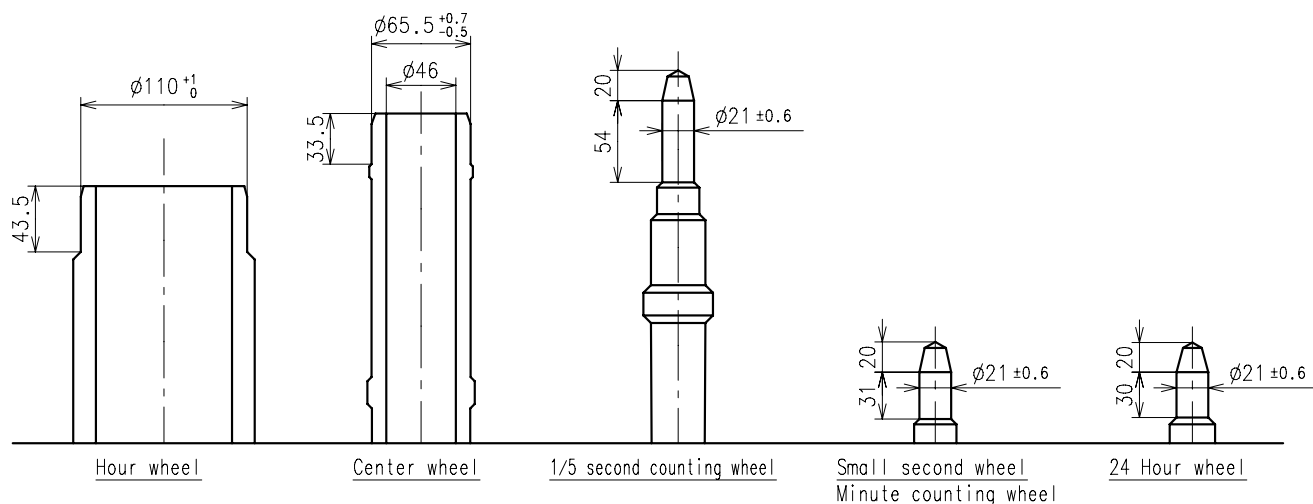


	Parts No.					
	Hour wheel	Center wheel	1/5 second counting wheel	Small second wheel	Minute counting wheel	24 Hour wheel
Type M (2) YM14A**	0271637	0221605	0888502	0240512	0902501	1002535

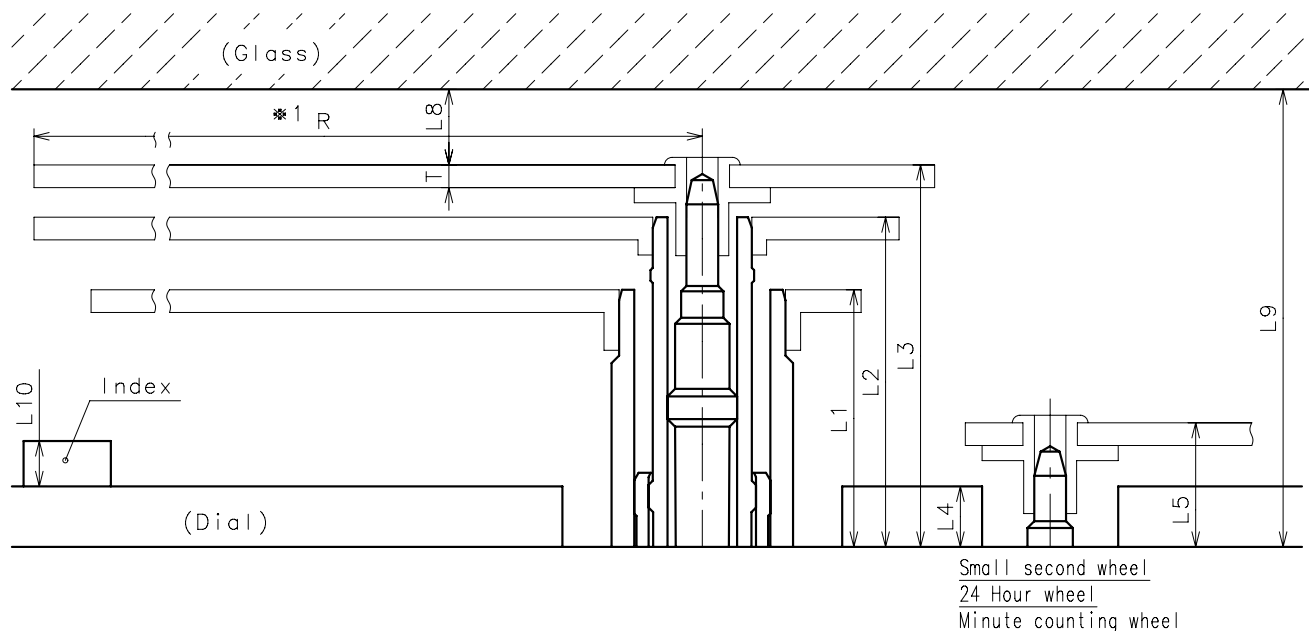

	L1	L2	L3	L4	L5	—	—	L8	L9	L10	T	*1 R
Type M (2) YM14A**	170	218	252.5	40	82	—	—	MIN: 50	MIN: 302.5	MAX: 50	15	MAX: 1250

※1: It is the size taken into consideration for hands attachment.
Please observe some standard value specified in unbalance and moment of inertia when using long hands.

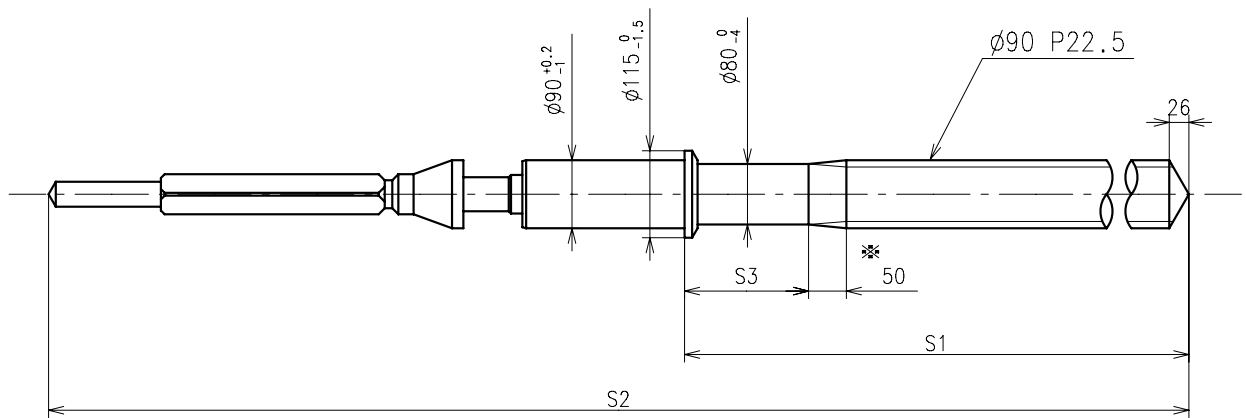


※ Not threaded


	Part No.	S1	S2	S3
Type-1 (Standard)	0351584	1164	2005.5	164
Type-2 (Long)	0351585	1840	2681.5	750

Material : Steel

Hardness : Vickers 600±50

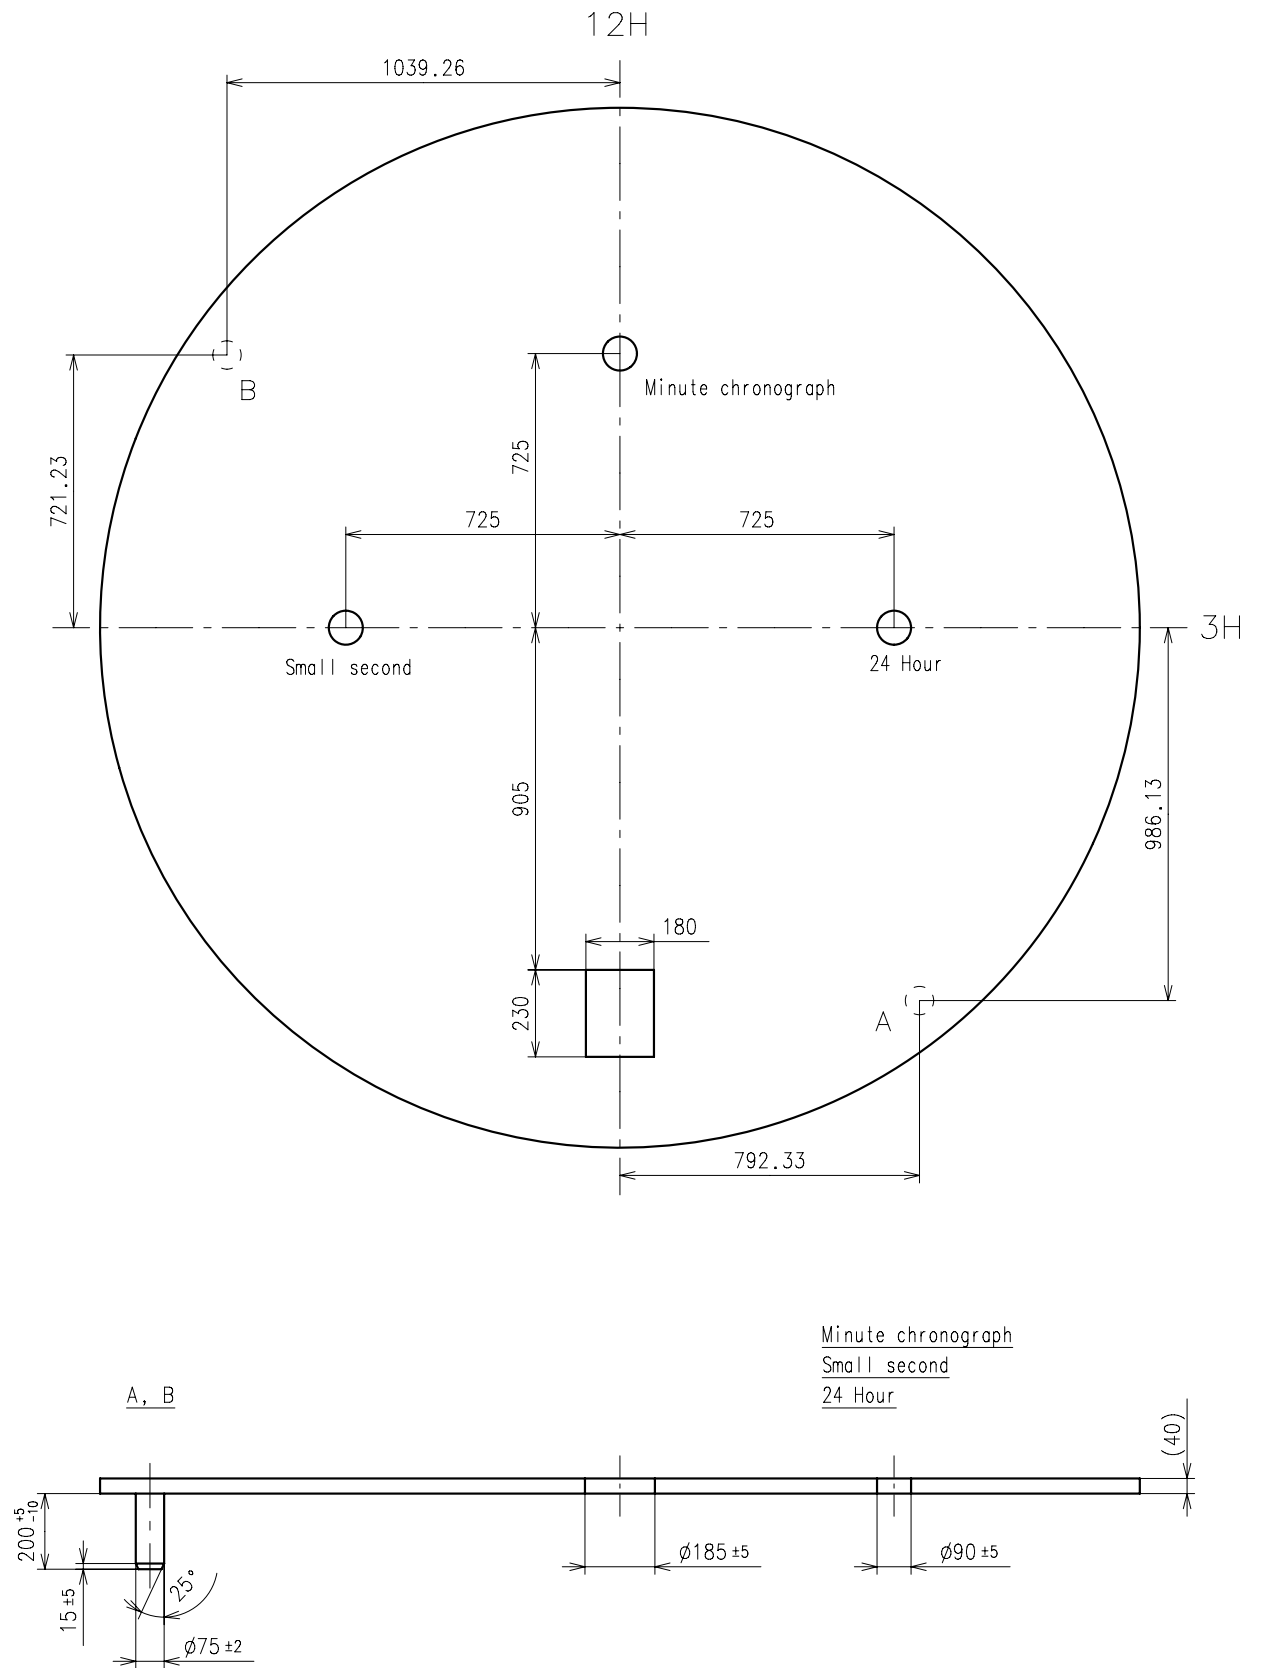

TYPE 1 : STANDARD
PART CODE:0866854
MOV'T REF:YM14A**

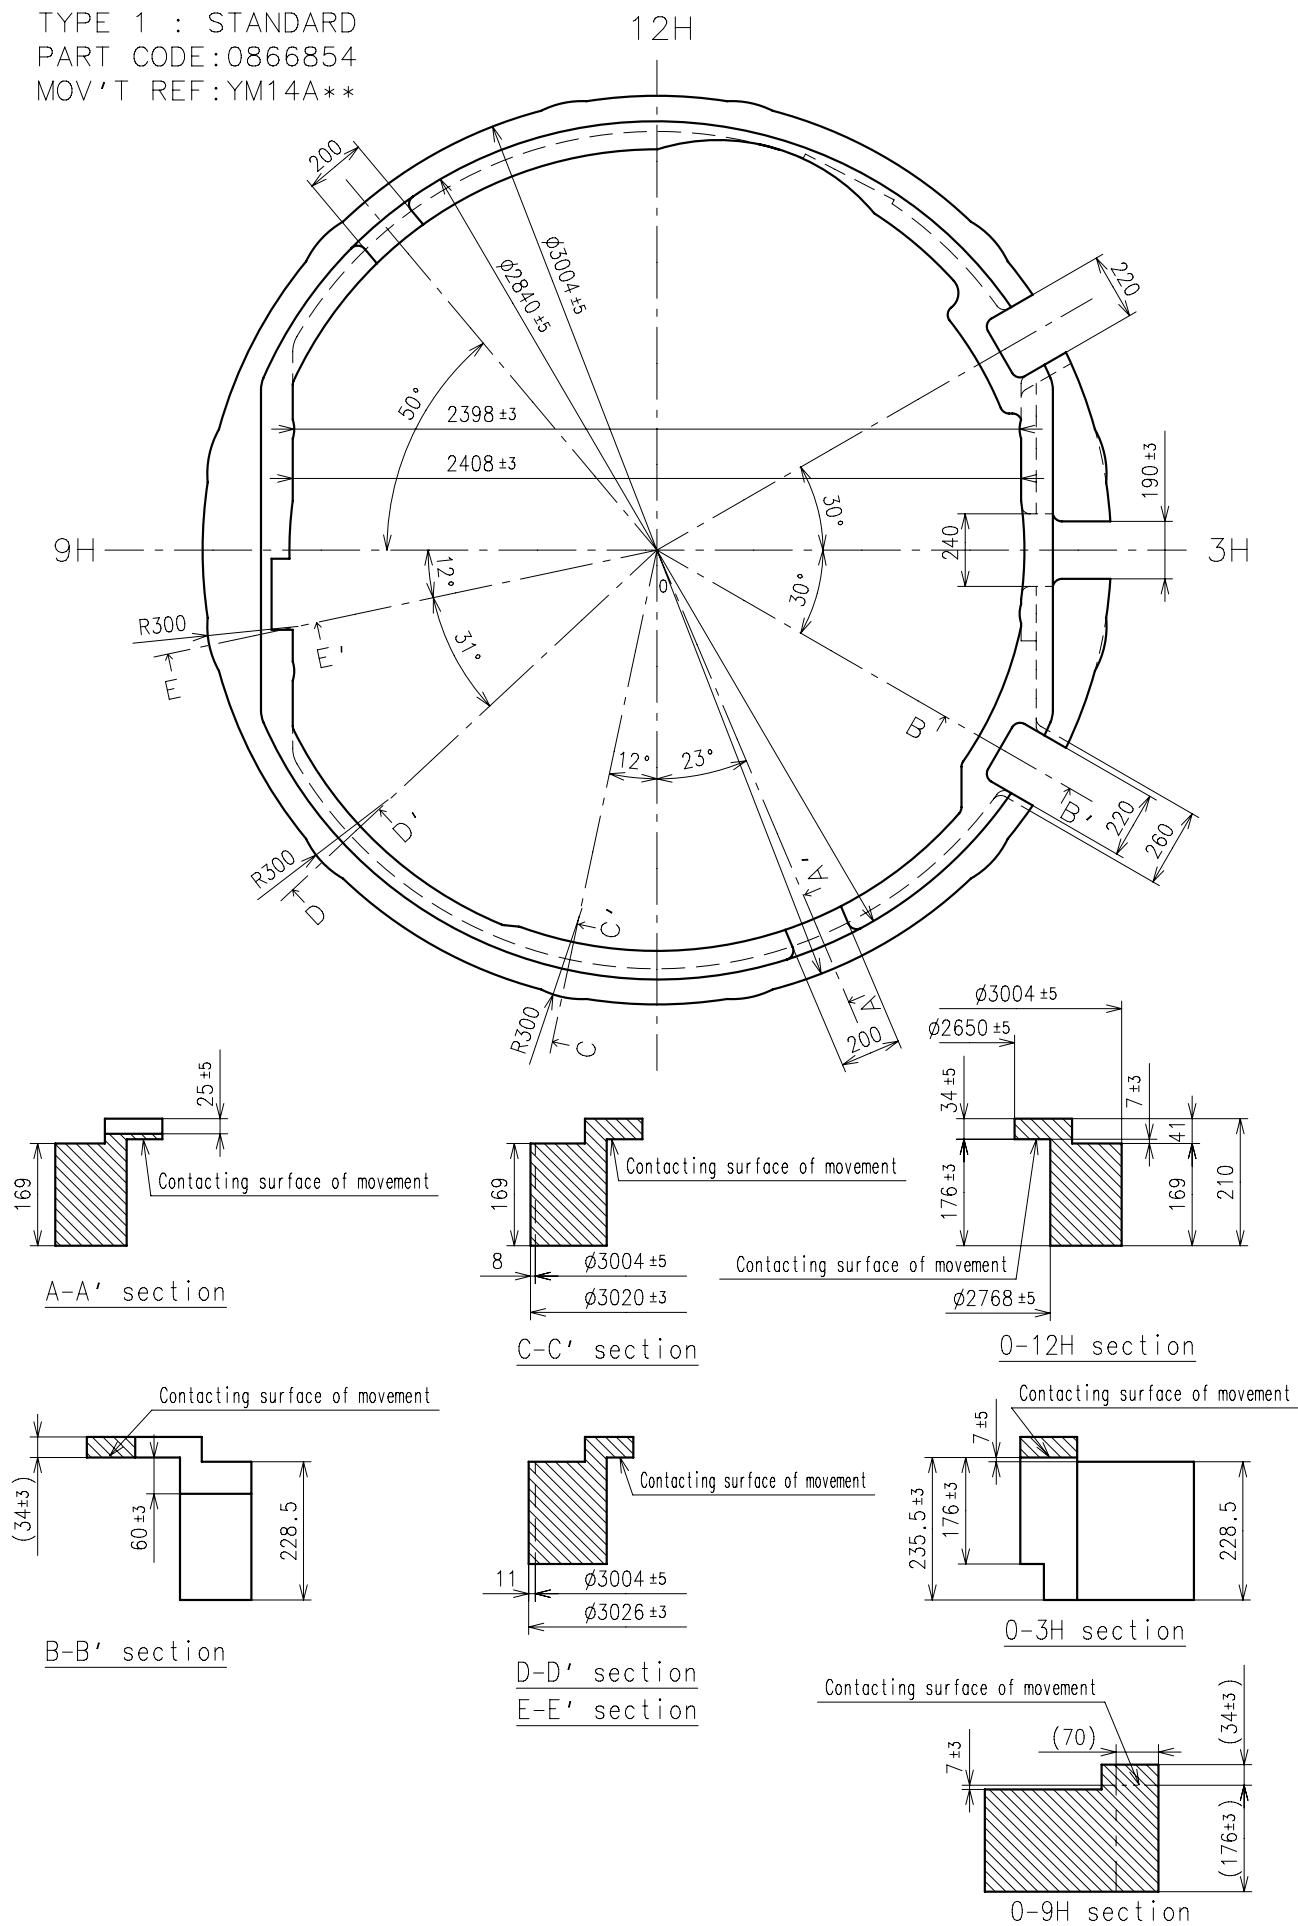

1.How to replace the battery

- Please use the specified battery to keep the stable performance for a long time.
- Please install the minus part of the battery towards inside of the watch.
- When installing or changing the battery, it is recommended to remove two battery clamp screws first, then remove the battery clamp not to damage the movement parts.
If you install the battery without removing the battery clamp, please install the battery from [→] direction as illustrated below Fig.[1].
- Install the battery under the circuit cover as illustrated below Fig.[1] and Fig.[2].
- System-reset is not required.
- After installing the battery, set the current time and then set the 1/5 second chronograph hand and minute chronograph hand at "0" position.

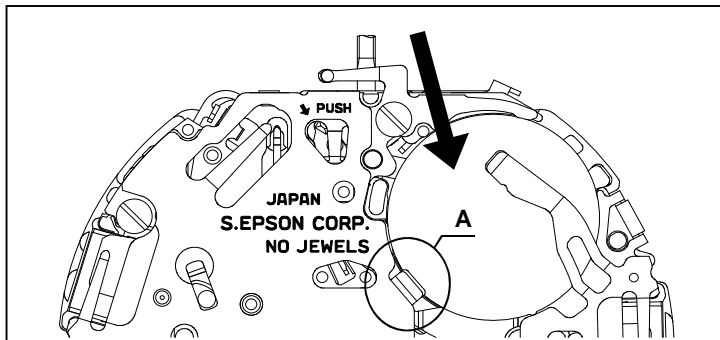


Fig.[1]

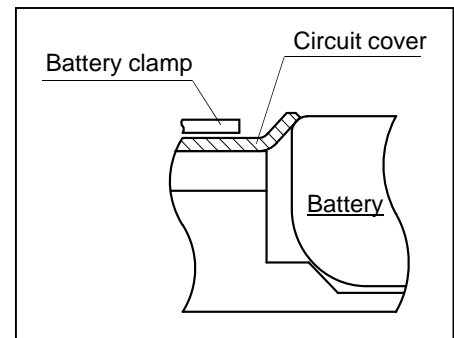


Fig.[2] A section

2.How to remove the stem

- When removing the stem, pull out the crown at 1st click position and then remove the stem while pressing the hollow portion of setting lever by tweezers. (Refer to the Fig.[3].)

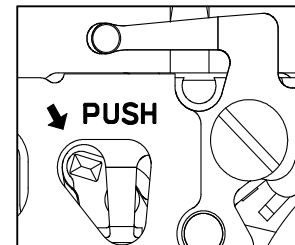


Fig.[3] Crown pulled out at 1st click

3.How to set the hands

- Each hand moves at step interval. Set the each hand at correct position according to the scale on the dial in order not to make a mistake in reading time.
- Do not turn the hand forcibly.


4.How to remove the hands

- When removing the hands, use exclusive fork-shaped tools.
- Do not remove the dial under the condition that any hands are set.

5.How to test the accuracy

When measuring the time accuracy, use specified Quartz Tester and change the gate time in 10 seconds.

Cal. YM14A	Attention of casing part structure	Date : 31/Jul./'14 Rev. : 02
<p>1.Minute hand</p> <p>The center wheel have a safety stopper structure to prevent the minute hand from being pressed too much. However pay attention to the contact between hour hand and minute hand.</p> <p>2.Holding ring for dial</p> <p>Use the specified holding ring for dial to prevent rotation of the movement inside of the case in order to stabilize the button operation. Refer to the [Holding ring for dial] page instruction as to the shape and tolerance.</p> <p>3.Case</p> <p>Use the metal case to prevent from the movement mal-function by static electricity.</p>		

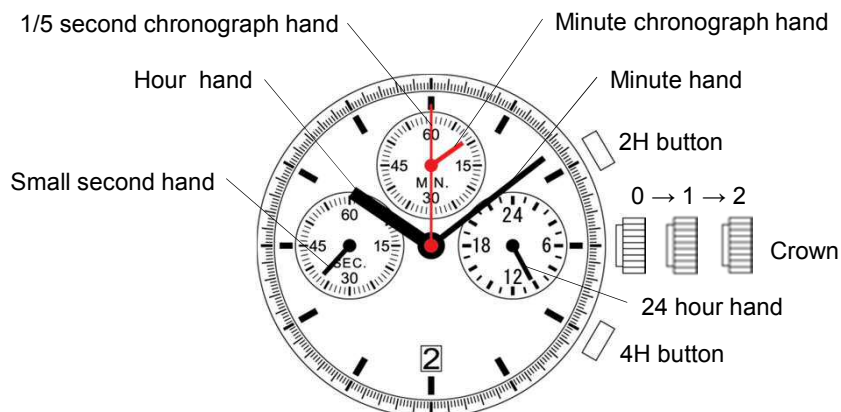

	Crown position		
	0 click	1st click	2nd click
Crown	Free	Turn clockwise for date change	Time setting
2H button	Chronograph Start/Stop Restart	Chronograph Start/Stop Restart	[*1]
4H button	Chronograph Reset Split Split release	Chronograph Reset Split Split release	[*1]

[*1] How to set the "0" position

Pull crown out to the 2nd click position.



Press 2H button for 2 seconds.

Minute chronograph hand turns a full round and can now be set to correct "0" position.



Press 4H button repeatedly to set it to "0" position.



Press 2H button for 2 seconds.

1/5 second chronograph hand turns a full round and can now be set to correct "0" position.





Press 4H button repeatedly to set it to "0" position.



Push crown back to normal position.

Chronograph function

- The chronograph can measure up to 60 minutes in 1/5 second increments, capable of timing 12 hours.
- When the measurement reaches 12 hours, the chronograph automatically stops counting.

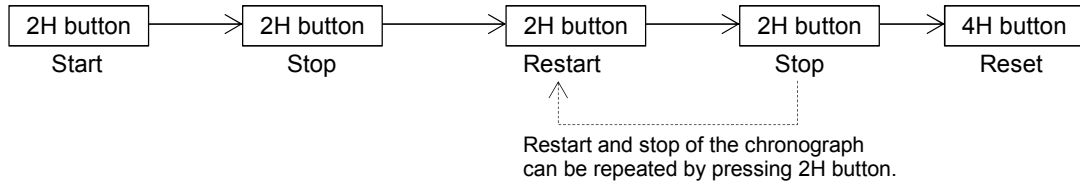■ Standard measurement**■ Accumulated elapsed time measurement****■ Split time measurement**