

Watch Movement Specification and Drawing

CHRONOGRAPH

Cal. YM95A

Movement Size

12""

Casing Diameter

Ø 27.0mm

Height

3.7mm

Battery Life

5 years



Date: 11/Jan./'19

Cal. YM95A

| Items | Rev. | Page |
|------------------------------------|------|-------|
| Specifications | 02 | 1 |
| Appearance | 01 | 2 |
| Casing | 03 | 3 |
| Hand fitting | 02 | 4 |
| Hand setting stem | 02 | 5 |
| Dial | 01 | 6 |
| Holding ring for dial-01 | 02 | 7-01 |
| Holding ring for dial-02 | 02 | 7-02 |
| Attention for assembly | 03 | 8 |
| Attention of casing part structure | 02 | 9 |
| Operation-01 | 01 | 10-01 |
| Operation-02 | 01 | 10-02 |

YM95A

Specifications

Date: 30/Jan./'15

Rev.: 02

Analog Quartz 12" Center second Chronograph Movement

1. MOVEMENT DIMENSIONS

Outside diameter ϕ 27.60mm(12H-6H) × 24.00mm(3H-9H)

Casing diameter ϕ 27.00mm(12H-6H) Total height 3.7mm (including battery)

2. TIME STANDARD

Type of quartz oscillator Tuning fork Frequency of quartz oscillator 32,768 Hz

Accuracy ± 20 seconds per month (on wrist)

Operating temperature range -5° C to $+50^{\circ}$ C Regulation device Nil (Pre-adjusted)

3. INDICATOR / FUNCTIONS

3 Hands Hour / Minute / 1/5 second chronograph (Center)
Small hands Small second (9H) / Minute chronograph (6H)
Calendar Instant setting device for date calendar

Reset switch

Power depletion warning function (BLD) (Small second hand moves at 2-second intervals)

Chronograph The chronograph can measure up to 60 minutes in 1/5 second

increments, capable of timing 12 hours.

4. FEATURES

Jewels 0 Jewels

Anti-magnetism Over 1600A/m (Direct current magnetic field)

Maximum unbalance of hands Small second hand : $0.03\,\mu\,\mathrm{N}\cdot\mathrm{m}$ Minute chronograph hand : $0.03\,\mu\,\mathrm{N}\cdot\mathrm{m}$

1/5 second chronograph hand $0.09 \mu \text{ N} \cdot \text{m}$ Minute hand $0.09 \mu \text{ N} \cdot \text{m}$

Moment of Inertia 1/5 second chronograph hand : less than $0.2 \mu \text{ g} \cdot \text{m}^2$

5. BATTERY

Type / Size Silver oxide battery / ϕ 9.5mm × t 2.73mm

Recommended battery SR927SW Nominal voltage 1.55 V

Battery life Approx. 5 years

(2 hours chronograph operation per day)

Driving current consumption Approx. $0.80 \mu A$

Operation stopping voltage 0.9 V

6. SEPARATED PARTS (Parts code)

Hand setting stem 0351584 (Standard) or 0351585 (Long) Holding ring for dial 0866650 (Standard) or 0866789 (Special)

Battery SR927SW

7. TEST OF ACCURACY

Equipment to be used SEIKO quartz tester QT-99, QT2100

Greiner quartz timer-C, Witschi Q-tester 4000


Duration of measurement 10 seconds


All specifications are subject to change without notice.

Appearance

Date:31/Jul./'14

Rev.:01

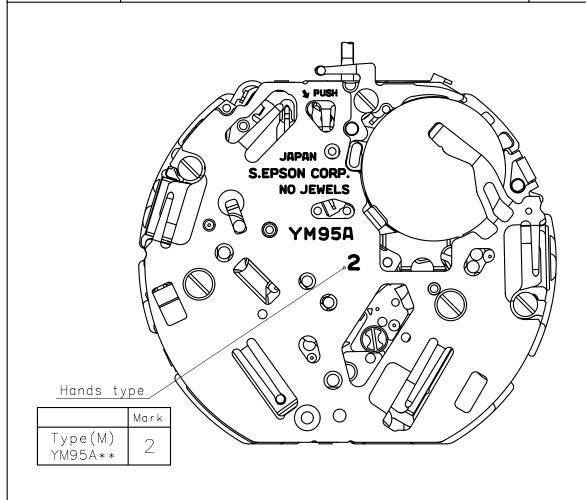


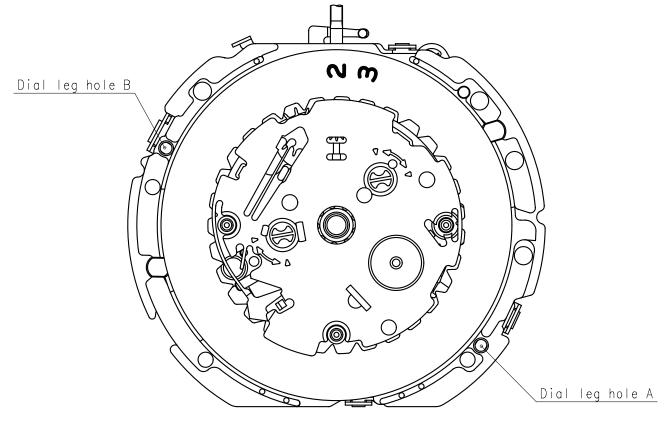

Casing

Date:30/Nov./'17

Rev.:03

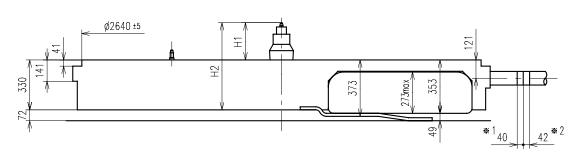


☀1:First pullout stroke

| ×2:Second | pullout | stroke |
|-----------|---------|--------|
| | | |

Center post Type M (2)
YM95A**

Maximum height from dial support H1 246.5

Total height including movement H2 576.5

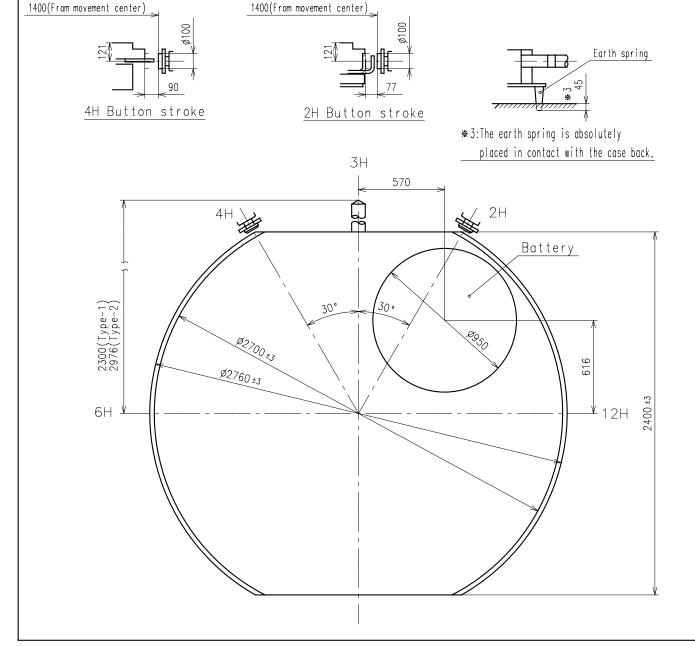

Hand fitting

Date: 11/Jan./'19


Rev.:02

▼ Unbalance


· Small second hand $\leq 0.03\mu$ N·m (3μ g·m) · Minute chronograph hand $\leq 0.03\mu$ N·m (3μ g·m) · 1/5 second chronograph hand $\leq 0.09\mu$ N·m (9μ g·m) · Minute hand $\leq 0.70\mu$ N·m (70μ g·m)

Moment of inertia

· 1/5 second chronograph hand ≤ 0.2 μ g · m²

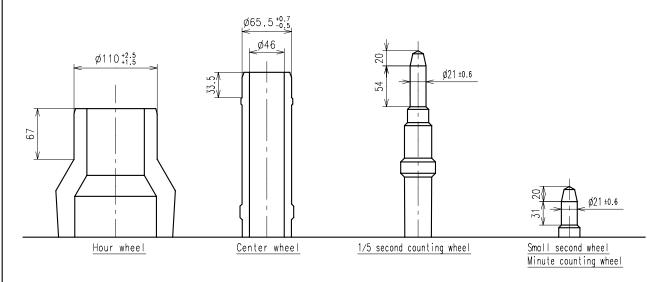

| | Parts No. | | | | |
|-----------------------|------------|--------------|------------------------------|-----------------------|--------------------------|
| | Hour wheel | Center wheel | 1/5 second counting wheel | Small second wheel | Minute counting wheel |
| Type M (2) YM95A** | 0271588 | 0221583 | 0888582 | 0240580 | 0902580 |

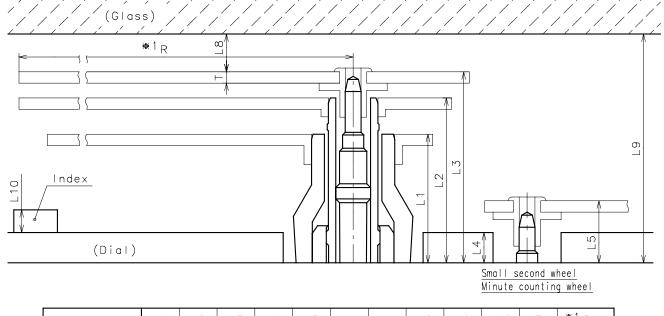

| | L 1 | L2 | L3 | L4 | L5 | _ | _ | L8 | L9 | L10 | T | *1 R |
|-----------------------|-----|-----|-------|----|----|---|---|------------|---------------|------------|----|--------------|
| Type M (2) YM95A** | 170 | 218 | 252.5 | 40 | 77 | | | MIN: 50 | MIN: 302.5 | MAX: 50 | 15 | MAX: 1250 |

★1:It is the size taken into consideration for hands attachment. Please observe some standard value specified in unbalance and moment of inertia when using long hands.


Unit: 1=1/100mm

Ρ. 4

Hand setting stem

Date:31/Jul./'14

Rev.:02

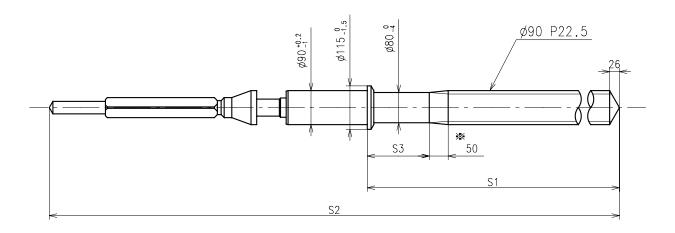


≫ Not threaded

| | Part No. | S1 | S2 | S3 |
|----------------------|----------|------|--------|-----|
| Type-1 (Standard) | 0351584 | 1164 | 2005.5 | 164 |
| Type-2 (Long) | 0351585 | 1840 | 2681.5 | 750 |

Material : Steel


Hardness : Vickers 600±50

Unit: 1=1/100mm P. 5

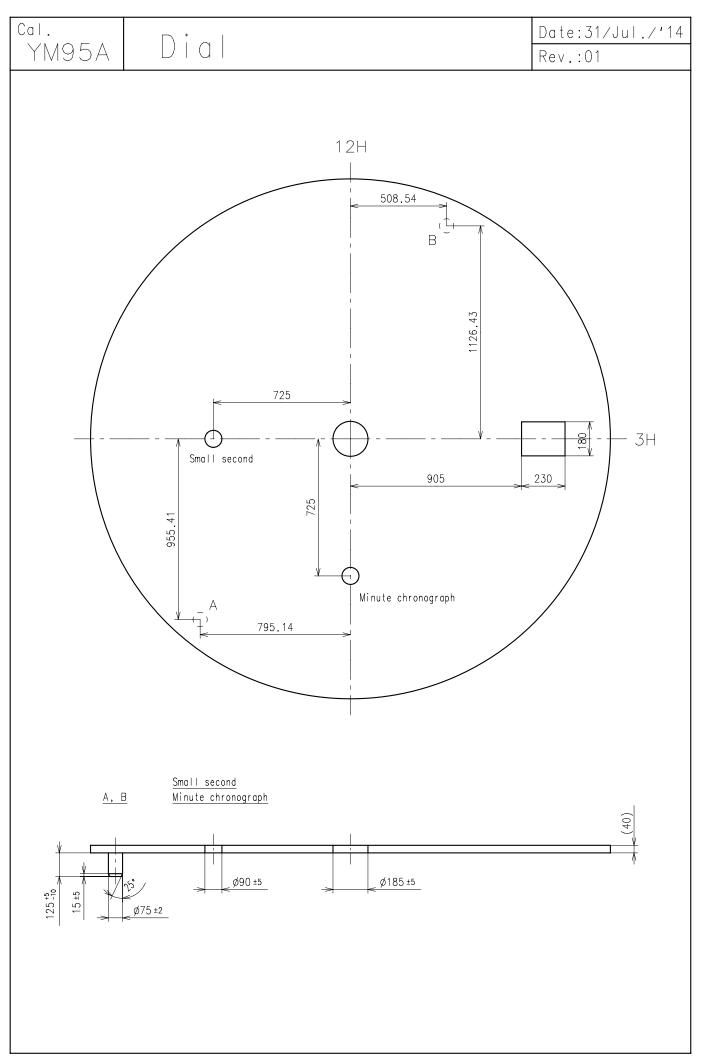

Unit: 1=1/100mm P. 6

Cal. Date:31/Jul./'14 Holding ring for dial-01 YM95A Rev.:02 TYPE 1 : STANDARD 12H PART CODE: 0866650 MOV'T REF:YM95A** 2398 ±3 190 ±3 2408 ±3 9H · 3H R300 Ø3004 ±5 Ø2650 ±5 34 ±5 Contacting surface of movement Contacting surface of movement A-A' section 0-12H section Contacting surface of movement Contacting surface of movement

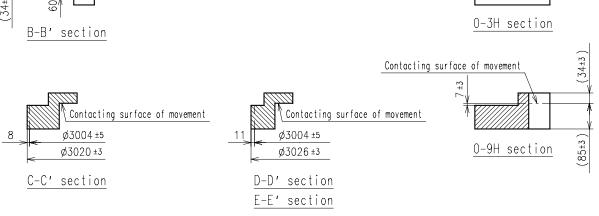


Unit: 1=1/100mm P. 7-01

cal. YM95A

Holding ring for dial-02

Date:31/Jul./'14

Rev.:02

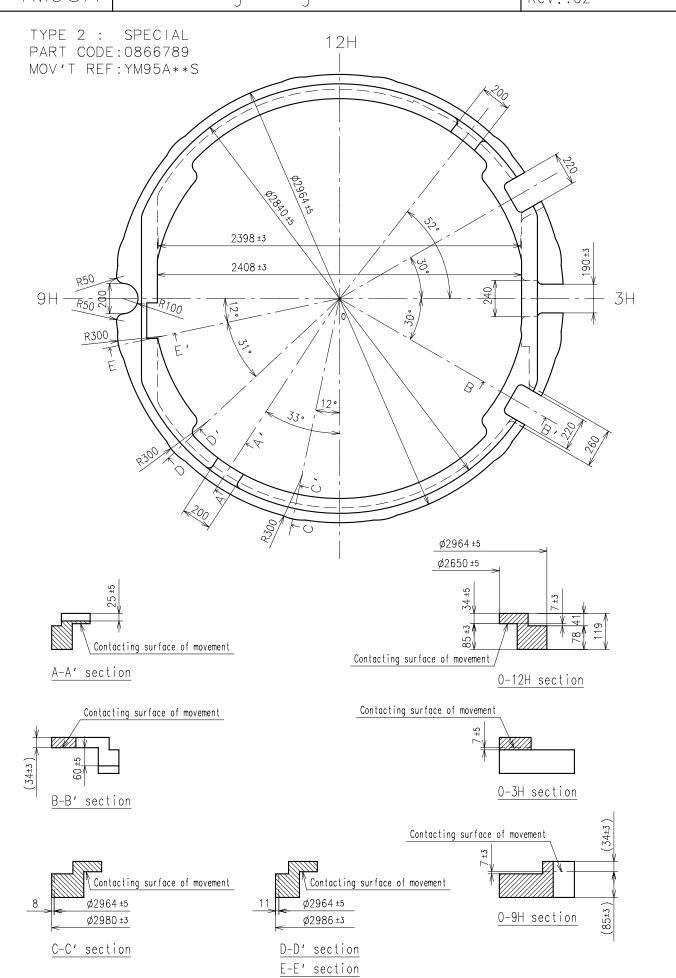

YM95A

Attention for assembly

Date: 15/Dec./'17


Rev.: 03

1. How to replace the battery

Please use the specified battery to keep the stable performance for a long time.

• Install the battery under the circuit cover as illustrated below Fig.[1] and Fig.[2].

- Please install the minus part of the battery towards inside of the watch.
- When installing or changing the battery, it is recommended to remove two battery clamp screws first, then remove the battery clamp not to damage the movement parts.
 If you install the battery without removing the battery clamp, please install the battery from [→] direction
 - as illustrated below Fig.[1].
- System-reset is not required.
- After installing the battery, set the current time and then set the 1/5 second chronograph hand and minute chronograph hand at "0" position.

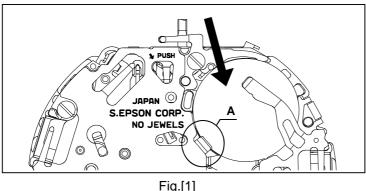

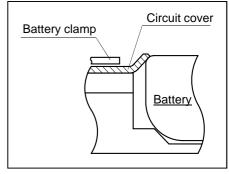


Fig.[2] A section

2.How to remove the stem

• When removing the stem, pull out the crown at 1st click position and then remove the stem while pressing the hollow portion of setting lever by tweezers. (Refer to the Fig.[3].)

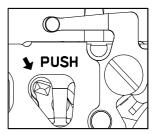


Fig.[3] Crown pulled out at 1st click

3. How to set the hands

- Each hand moves at step interval. Set the each hand at correct position according to the scale on the dial in order not to make a mistake in reading time.
- Do not turn the hand forcibly.

4. How to remove the hands

- When removing the hands, use exclusive fork-shaped tools.
- Do not remove the dial under the condition that any hands are set.

5. How to test the accuracy

When measuring the time accuracy, use specified Quartz Tester and change the gate time in 10 seconds.

YM95A

Attention of casing part structure

Date: 31/Jul./'14

Rev.: 02

1.Minute hand

The center wheel have a safety stopper structure to prevent the minute hand from being pressed too much. However pay attention to the contact between hour hand and minute hand.

2.Holding ring for dial

Use the specified holding ring for dial to prevent rotation of the movement inside of the case in order to stabilize the button operation.

Refer to the [Holding ring for dial] page instruction as to the shape and tolerance.

3.Case

Use the metal case to prevent from the movement mal-function by static electricity.

4. Hour wheel

When set and remove the hour hand repeatedly, it may reduce the hand fixing torque because the hour wheel is made by plastic.


To ensure the enough fixing torque, it isn't recommended to re-assemble the hour hand more than five times.

YM95A

Operation-01

Date: 31/Jul./'14

Rev.: 01

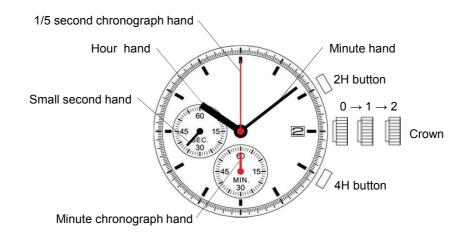

| | Crown position | | | | |
|-----------|---|---|--------------|--|--|
| | 0 click 1st click | | 2nd click | | |
| Crown | Free | Turn clockwise for date change | Time setting | | |
| 2H button | Chronograph Start/Stop Restart | Chronograph Start/Stop Restart | [*1] | | |
| 4H button | Chronograph Reset Split Split release | Chronograph Reset Split Split release | [*1] | | |

[*1] How to set the "0" position

Pull crown out to the 2nd click position.

↓
Press 2H button for 2 seconds.

Minute chronograph hand turns a full round and can now be set to correct "0" position.

↓
Press 4H button repeatedly to set it to "0" position.

↓
Press 2H button for 2 seconds.

1/5 second chronograph hand turns a full round and can now be set to correct "0" position.

↓
Press 4H button repeatedly to set it to "0" position.

↓
Press 4H button repeatedly to set it to "0" position.

↓
Push crown back to normal position.

YM95A

Operation-02


Date: 31/Jul./'14

Rev.: 01


Chronograph function

- The chronograph can measure up to 60 minutes in 1/5 second increments, capable of timing 12 hours.
- When the measurement reaches 12 hours, the chronograph automatically stops counting.

■ Standard measurement

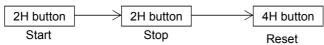

■ Accumulated elapsed time measurement

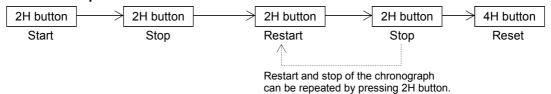

■ Split time measurement

